

P. C. Electronics 2522 Paxson Lane Arcadia CA 91007-8537 USA ©2007

Tom (W6ORG) & Mary Ann (WB6YSS) Tel: (626) 447-4565 m-th 8am-5pm pst (UTC -8)

Web site: www.hamtv.com

Email: ATVinfo@hamtv.com



TVC-12S 1240-1300 MHz ATV DOWNCONVERTER

The TVC-12S is a ready to go ATV downconverter designed to mix the 5 standard ATV frequencies in the 1240-1300 MHz amateur band down to TV channel 7, or 8 with 15 to 20 dB gain. The preamp stage uses a HJ-FET with a <.4 dB noise figure. A TVCX-12S board is mounted in a shielded enclosure ready to go with external +12 Vdc or 120 Vac 60 Hz power supply adapter.

TVC-12S: Connect the TV output to the TV set antenna input using RG6 75 Ohm coax cable with F plugs. Set the TV to channel 7 or 8, whichever is not used for over the air TV in your area. Standard output is channel 8, but if channel 7 is desired, jumper to ground solder pad 7 on the board inside. Your TV may need to be reprogrammed to tune an open channel 7 or 8 by first connecting to a Cable TV system to load all VHF TV channels (2-13) into memory. TVs that go to blue screen or have a timed shutoff or search when signals get snowy should not be used for ATV. From the 23cm antenna, use either the Belden 8214 or better Belden 9913 or LMR-400 coax with N plugs. Avoid loss by using adaptors or right angle connectors when absolutely necessary. An antenna mounted preamp should only be used if coax loss is greater than 3 dB and there is snow in the picture - ie. 9913 or LMR-400 longer than 60 ft. The antenna must be as high up as practical, same polarity, and designed for the 1240-1300 MHz frequency range. Weather proof all outside connectors. Connectors, coax cables and adapters are available from Radio Shack, NemaL (305) 899-0900 or your favorite ham store. The TVC-12S can be powered by the 120 Vac 60 Hz/12 Vdc adapter provided or an external 11 to 15 Vdc @ 120 ma with a 2.1 mm power plug (RS 274-1569 center is +) for battery or mobile operation. See other side of this sheet for setup and antenna info.


TVCX-12S: The board layout is shown below. It must be mounted in a shielded enclosure to keep strong adjacent channel TV broadcast interference out like we do in the Hammond 1590C box for the TVC-12S. The HJ-FET preamp and GaAsfet mixer stages have more than enough gain and low noise figure that adding preamps (except at the antenna) will not significantly improve sensitivity further, infact will only increase intermod interference. Oscillator trimmer cap C6 should not be touched unless outside +.5 / -.2Vdc from .5 Vdc on channel 1, the lowest frequency. Use only an insulated tuning tool. Output is TV channel 8, 181.25 MHz with no jumper or TV ch 7 if 7 is jumpered to ground. Pad 8 is jumpered for 45.75 MHz IF but other parts are changed also. If no jumpers at all, the default is ATV channel 1 downconverted to TV ch 8. The lowest frequency jumpered to ground is always selected if more than one are selected. Therefore, if you only want to select between two frequencies, jumper the higher channel solder pad on the board and run a toggle switch to the lower channel solder pad. Channel 6 is only for special ordered frequencies. For all 5 channels, run wires from pads 1-5 to a panel mounted rotary switch and wiper to ground or board soldered digiswitch. Output can be just a wire up to 4" long and the input no longer than 1/4" or else run coax with the shields connected directly to the board ground plane and connector shell on the other end respectively.



Ch	Freq.
1	1241.25
2	1253.25
3	1265.25
4	1277.0
5	1289.25

RF AGC (optional): designed for use with VRC-45 receiver board. For manual RF gain an external 10K pot to vary from 0 to 8 Vdc can be added to reduce strong signals as may be found during demos or public service operations. 8V at the AGC solder pad is the highest gain and the preamp bias pot on the board is set for that. If the no signal AGC is less such as when connected to the VRC-45 receiver RF AGC (6V nominal) the preamp bias is reset for max gain on a weak signal. C1 can also be fine peaked for best picture on a weak signal.

LED: Run leads from the LED solder pads to a panel mount LED to indicate power on. Square pad is the + side.or anode.

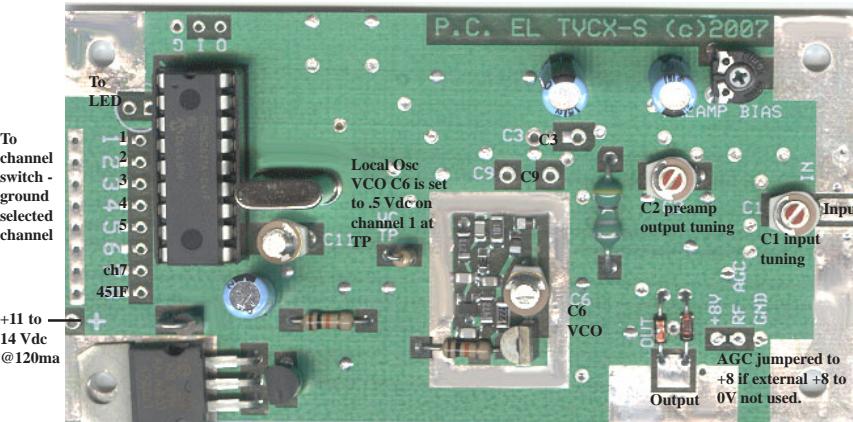

C3 peaks the ch 7/8 output. C9 peaks the local oscillator injection to the mixer. C11 is used to net the local oscillator to within +/-10 kHz of center frequency.

Trouble Shooting: check all coax and power connections. Moisture in coax? Rotor calibrated? TV on open channel? Try receiving a different station known to be line of sight? If the panel lamp is out, check the internal 1/2 Amp fuse. Check external power supply voltage and polarity. Check VCO TP for .5 Vdc +.5/- .2 Vdc on channel 1. Note that the RF input is DC ground through a RFC to discharge static buildup if checked with an Ohmeter and the output has back to back diodes as protection against leakage from a hot chassis TV set. See service policy on ordering page 9 in the catalogue or on our web site - Repair Authorization Form.


ANTENNA SYSTEMS

The antenna system is *the most important* part of your ATV system. The antenna must be the same polarity as the transmitting antenna and line of sight between them if at all possible. Trees, foliage, houses, etc. greatly absorb UHF energy. Compared to FM voice systems with the same power, antenna, etc. just the system bandwidth going from 15 KHz to 3 MHz in the receiver will decrease your sensitivity 23 dB. With this bandwidth the noise power floor is around .8 μ V. So you can see quality coax and high gain antennas up as high as possible are necessary to make up this difference compared to the DX you are used to with FM simplex.

Find out from local hams which polarity is in use. Performance in the 23 cm band is the same for horizontal or vertical, but cross polarization can cost you up to 20 dB. Areas which have had most hams come to ATV from 1296 MHz weak signal CW or SSB will tend to be horizontal, and those that were on UHF FM or more into public service and mobile will be vertical. Most repeaters will be vertical due to the lower cost and ease of buying omnidirectional gain antennas.

Antenna separation should be at least 7 ft, in line, driven element end to end spacing with 70 or 33 cm antennas for duplex ATV or crossband repeater work.

Antennas for ATV work must also have broad bandwidth as well as gain. Most high gain Yagi types have only 1% bandwidth, or 12 MHz at 23 cm. This will give less gain and higher VSWR to the most important color and sound subcarriers assuming that the antenna was cut for the exact video carrier frequency in the first place. The best true reference for antenna gains and performance is the results of the various VHF/UHF Conferences antenna measuring contests held annually and publicized in the ham magazines. Advertising claims have become mostly wishful thinking and sales hype.

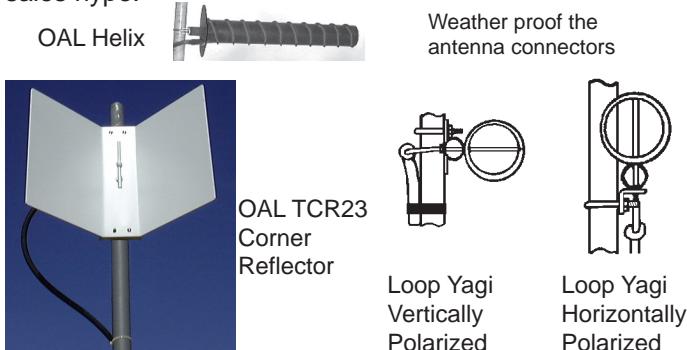

One beam designed for broad bandwidth that have proven out on ATV over the years is the Directive Systems 2424LYRM Loop Yagi. The 24 element antenna is only 6' long, end mounted for either polarity, but has 16 dBd gain. The OAL TCR23 corner reflector has 8 dBd and is great for portable. See our Application Notes web page for Homebrew antennas. Omni antennas can be used but are less gain and more susceptible to multipath ghosting. There are circular polarized antennas like the OAL 1.2/2.4 Helix mostly used for amateur satellite work that can be used. Circular polarization lets you work all modes & antenna polarities plus has the added advantage of less multipath dropouts and ghosts than a fixed polarity. Check our catalogue and web site for other antennas and vertical omni antennas that have been checked out by us for ATV.

(c) 2007 PC EL

ANTENNA CABLE

Use only new or tested low loss coax that has at least 95% shielding. We suggest Belden 8214 , 9913 or LMR-400. RG 213 or 214 is fine but has twice the loss. For runs over 100' you may want to consider investing in some good copper hard line and/or an antenna mounted low noise preamp such as the Downeast 23LNAWPQ. An antenna mounted preamp can increase receive sensitivity by an amount equal to the coax loss.

Use type N connectors for all outside coax connections. Take care to properly put them on the cable. Prevent moisture contamination of the coax by wrapping all connections with two layers of vinyl tape. Coax Seal is also good. Then spray all connections and antenna with *clear epoxy* paint. Colored paint may have conductive particles in them that will affect the antenna gain or match, or give intermods. Moisture in the coax results in increased loss and greater possible intermod interference. If moisture contamination is suspected, peal back the braid and look to see if it is still bright. If it is oxidized, replace it. VSWR will actually look better with the higher loss from moisture contamination.

DX "What kind of distance can I expect?" is the most asked question. There is no pat answer because of all the variables. See the 23cm ATV DX graph on our web site. It will give you the line of sight snow free picture distance given transmitter power and antenna gains. Typically with the 24 element loop Yagi antennas at both ends and 1W of power, you can expect about 10 miles. With an 18 watt amp, it goes up to about 40 miles for P5.

For greater DX most of your time and effort should be in the antenna system... greater antenna height, lower loss coax or bigger antenna. This will improve both transmit and receive conditions. DX will double for every 6 dB of change. One P unit also equals 6 dB. Antenna placement should be away from and above trees and roof tops. The RF horizon on flat terrain for an antenna at 50' above ground is 10 miles - Miles = square root of 2 times the height in feet. Foliage greatly absorbs 23 cm energy. You can experience non-line of sight DX depending on reflections, temperature inversion skip, and use of ATV repeaters.

TV SETUP

Any TV set or VCR tuner that can be set to open channel 7 or 8 should work well with the ATV downconverter. You many have to reset the programmed channels so as not to skip the open channel by setting the TV up first connected to a cable system. Also TV's that don't go to blue screen or auto shutoff when no signal should be used. 75Ω coax must be used between the downconverter and TV sets antenna terminals. Do not use twin-lead as it can act as an antenna. Set the TV tuner to channel 7 or 8, which ever is not used in your area. With the downconverter connected but *not on*, rock the TV fine tuning back and forth to make sure you are right on the selected channel and that there is no adjacent channel interference. Then turn on the downconverter and set the downconverter channel knob for a known close by line of sight station that is on the air using that frequency. A 2 meter simplex ATV coordination channel is very handy for talking in the stations picture for antenna alignments and other adjustments while talking full duplex on the sound subcarrier. 144.340 and 146.430 simplex are the most popular.